



### 5. Crankshaft Position Sensor

#### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the air intake chamber. <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 4) Remove the service hole cover.

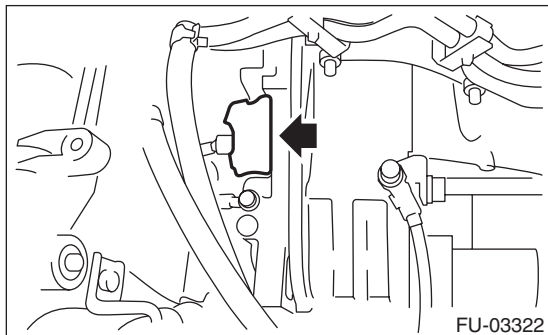

- 5) Remove the crankshaft position sensor.

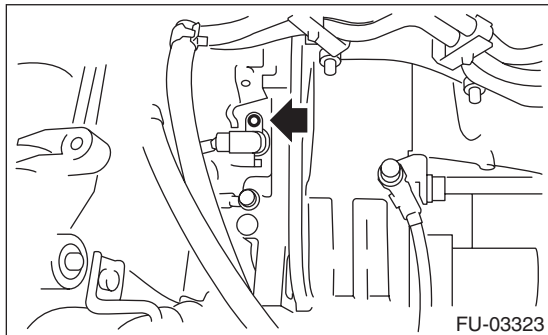

- 6) Disconnect the connector from crankshaft position sensor.

#### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**6.4 N·m (0.7 kgf-m, 4.7 ft-lb)**

